



700 Pine Ridge Road Golden CO 80403 **Tel** (303) 278 8287 1(888) 4X4 SLEE **Fax** (303) 278 7182

Slee Off Road Second Battery Tray - Toyota Landcruiser 1998-2007 (Preliminary)



Qty	Parts Included	Tools
1	Slee Battery Tray	Basic Hand Tools
1	Slee Bracket	Drill and Drill Bit(s)
4	Bolts, Nuts and Lock Washers for Bracket (Set of 4)	
1	Battery Hold Down Bar	
2	J-Bolts	
4	Bolts for J-Bolts	
1	8MMx30MM Flange Bolt	
1	8MMx40MM Flange Bolt	
1	6MMx25MM Flange Bolt	
1	Spacer (Black)	

Thank you for your purchase from Slee Off-Road! If you should you have any questions or concerns, please do not hesitate to contact us immediately at 1 888 4X4 SLEE or at sales@sleeoffroad.com.


Slee Off Road strives to provide comprehensive installation instructions. However, in some circumstances minor inconsistencies may be encountered with instructions and or provided parts. If you encounter such an inconsistency, please notify us, as your input is important. Slee Off-Road guarantees all parts free from defects for one year from the original purchase date.

1. Remove the 8MM bolt that secures the power steering reservoir as shown.




Remove Bolt (**Step 1**)

2. Remove the 6MM bolt which secures the wiring harness to the firewall. Located below the wiper motor.

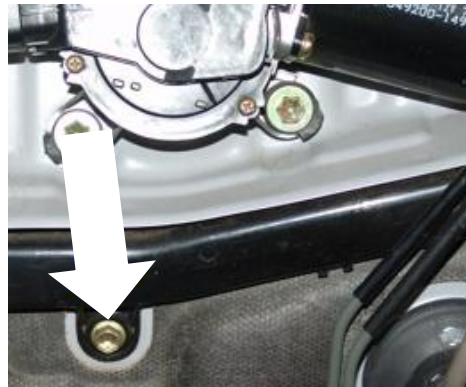

Remove Bolt (**Step 2**)

3. Install the Battery tray with the bracket using the supplied hardware as shown. Install the Black Spacer with the Power Steering Reservoir with the 8MMx40MM bolt.

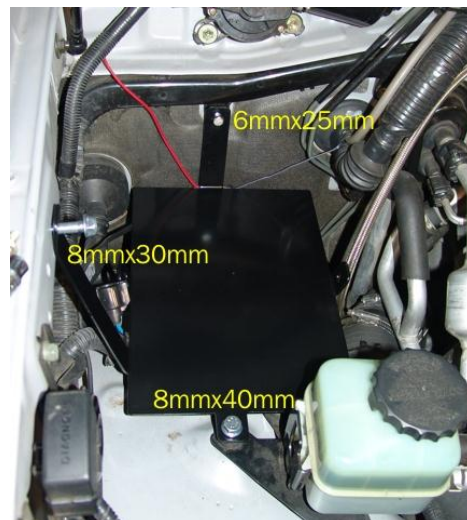

Installing the tray (**Step 3**)

4. Prepare to install the Slee Bracket. Remove the two plastic clips inside the fender well as shown.




Remove clips (Step 4)

5. Install the Slee Bracket with two bolts, lock washers and nuts on the bottom of the bracket as shown.



Install Slee bracket (Step 5)

6. Once the bracket is in place, mark two holes to be drilled into the Slee Battery Tray. Remove the Slee bracket, drill the two holes into the tray and reinstall the bracket with all four bolts, lock washers and nuts.

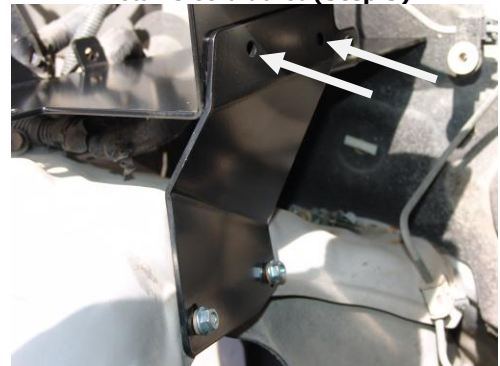

Prepare to Drill holes into battery tray (Step 6)

7. Install battery using the Battery Tie Down Bar, J-Bolts and four nuts.

Note; The Slee Off Road Battery tray is designed to fit an Optima Battery. If an Optima battery isn't installed, validate the battery posts will not touch the hood once closed.

Thank you for your purchase from Slee Off-Road! Visit us at sleeoffroad.com or email us at sales@sleeoffroad.com.